

# TELETASK

REMOTE CONTROL - TDS12502

User manual

EN

USEFUL SUMMARY INSIDE

p.1








Handleiding

NL

MET HANDIG OVERZICHT

p.1



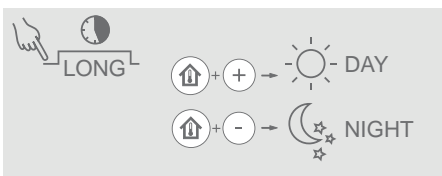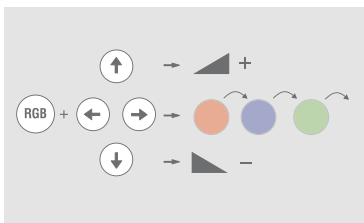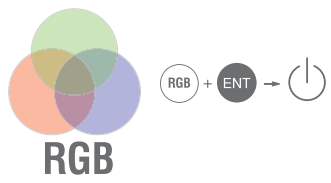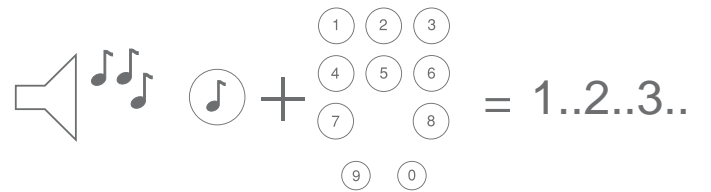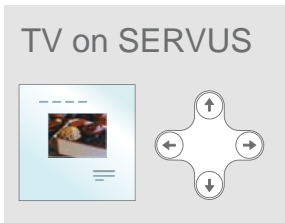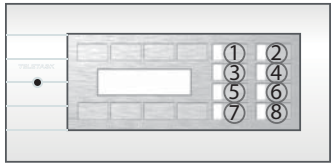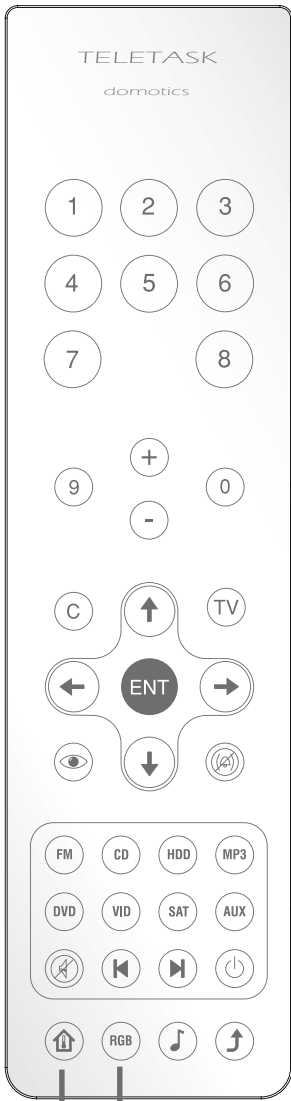

## LOCAL DOMOTIC FUNCTIONS

**Buttons 1 to 8** (main buttons) correspond with the functions of the control panel you are aiming at.


The buttons are placed in the same way they are placed on a TELETASK 8-button panel or LATUS. A LATUS LCD has the main buttons on the right hand side.

If you push the main buttons while pressing the **SHIFT button**, you can activate functions of the secondary buttons on a LATUS or LATUS LCD.

LATUS




LATUS-LCD

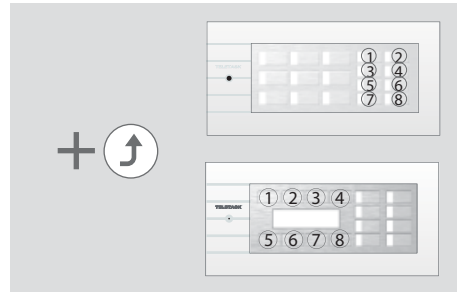


## MASTER DOMOTIC FUNCTIONS

The 'MASTER' functions are 8 special functions that are accessible on every panel in your house. You can activate these functions by pushing one of the **main buttons** (1-8) while pressing the **MASTER shift button**.



## TEMPERATURE CONTROL

Pushing the + or - button while pressing the **MASTER shift button**, will change the target temperature of the temperature zone you are in. The target temperature increases or decreases by 0,5°C.




## AUDIO CONTROL


Using one of the source selection buttons (FM, CD, HARD DISK, MP3, DVD, VIDEO, SATELITE, AUX) will directly change the source for the audio zone you are in.

Pushing the + or - button will increase/decrease the volume.

Pushing the numerical buttons (0-9) while pressing the **AUDIO shift button**, will select the song, radio or video channel presets (if supported). The four other audio buttons: MUTE, PREVIOUS, NEXT, ON/OFF are to be used without shift button.

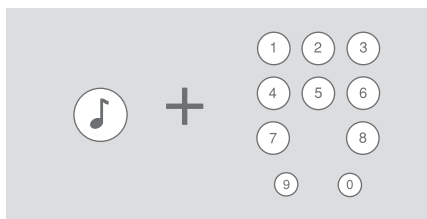

## RGB COLOR LIGHT CONTROL

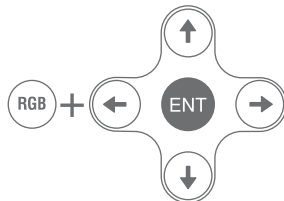


For every touch panel a predefined RGB light zone can be defined.

In combination with the **RGB SHIFT button**, the left or right arrow will switch between up to 10 colors. Press the arrows UP or DOWN to brighten or dim the light. Pressing the enter key while pressing the **RGB shift button** will turn the specific light ON or OFF.

## TV INTERFACE CONTROL

When a **TELETASK TV Interface** is installed (TDS ref. 14050) you can use your remote control to access all of your domotic functions on your TV screen.

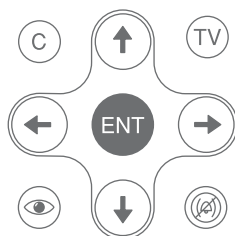

The **TV button** will activate the TELETASK menu on your TV. With the four **arrow buttons**, you browse through the different menus. The **ENT button** is for selecting (lights, motors, sensors, rooms, ...) while the **C button** cancels the action or brings you back to the previous menu.

Two extra functions are:



This button shows the (optional) camera connected to the TV Interface.




This button is used to confirm/reset a message or alarm displayed on your TV.

## REPLACING THE BATTERY

Turn your remote control so the front is facing the table. Click the small groove to the middle and pull the clip out of the remote control.

Replace the old battery by one of the type CR2025 or CR2032.

Make sure you insert and position the battery correctly! The + sign should be at the back of the remote control

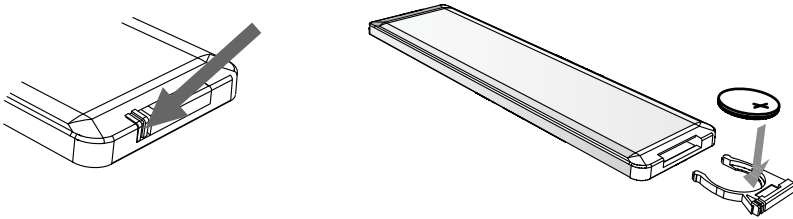

ATTENTION: Batteries can be harmful for the environment. Recycle them appropriately.

## REMARKS

A TELETASK device is designed to provide the highest level of comfort possible in controlling your house. Lights, shutters, moods, heating, air-conditioning, audio, video etc. can easily be controlled.

This remote control is able to communicate with all control panels of the TELETASK domotic family. Some older control panels may not be able to work with the latest features on this remote control (for example, RGB Lighting). Obviously all the new control panels leaving TELETASK are able to work with these features.

### SAFETY PRECAUTIONS:


Some functions can be dangerous when used by small children, visitors or other persons. Avoid them to be able to use the remote control or avoid functions that can cause dangerous situations (like opening doors, activating alarms, ...).

## RUIMTE-SPECIFIEKE DOMOTICA FUNCTIES


De toetsen 1 tot en met 8 (basistoetsen) komen overeen met de toetsen van het touchpanel waar je de afstandsbediening op richt.

De toetsen op de afstandsbediening zijn gepositioneerd zoals op de TELETASK 8-toetser en LATUS. De LATUS LCD vormt hierop een uitzondering. Hier zijn de basistoetsen de toetsen aan de rechterkant. Als je, in combinatie met de **SHIFT toets**, één van de basistoetsen indrukt, bedien je de secundaire functies van het touchpanel (LATUS, LATUS-LCD).

LATUS

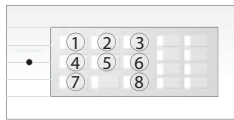


LATUS-LCD

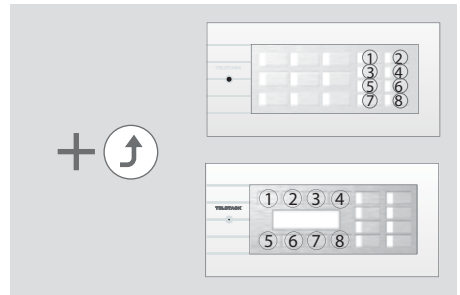


## MASTER DOMOTICA FUNCTIES

De 'MASTER' functies zijn acht functies die voor alle touchpanels identiek zijn. U bedient ze door de basistoetsen (1-8) in te drukken, in combinatie met de **MASTER SHIFT toets**.



## TEMPERATUUR BEDIENING

Door, in combinatie met de **MASTER SHIFT toets**, de + of de - toets in te drukken, verandert u de target temperatuur voor de temperatuurzone waarin u zich bevindt. U verhoogt of verlaagt ze met stappen van 0,5°C.




## AUDIO BEDIENING


Met de bron selectie toetsen (FM, CD, HARD DISK, MP3, DVD, VIDEO, SATELITE, AUX) kunt u rechtstreeks de audio bron selecteren voor de audiozone waarin u zich bevindt. De + en - toetsen verhogen/verlagen het volume.

Ook de vier onderste audio toetsen: MUTE, VORIGE, VOLGENDE, ON/OFF zijn rechtstreeks en specifiek voor de audio zone waarin u zich bevindt.

De selectie van nummer, radiozender of videokanaal, kan door de combinatie van de **AUDIO SHIFT toets**, met één van de nummerieke toetsen (0-9).

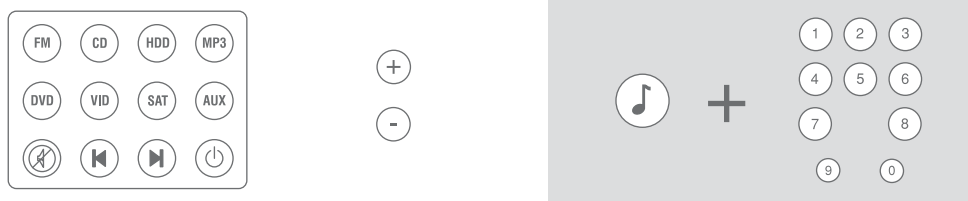

## RGB KLEUR LICHT BEDIENING

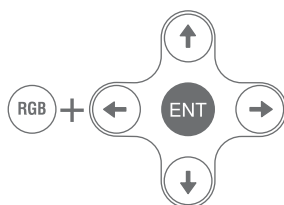


Op elk toetsenpaneel kan een RGB verlichtingszone voorgeprogrammeerd worden.

Door de pijltjestoets LINKS of RECHTS te combineren met de **RGB SHIFT toets**, kiest u de gewenste kleur. Met de pijltjestoetsen OP en NEER, kunt u het licht versterken of dimmen. De ENT toets, ook weer gecombineerd met de **RGB SHIFT toets**, schakelt het licht aan of uit.



## TV INTERFACE BEDIENING

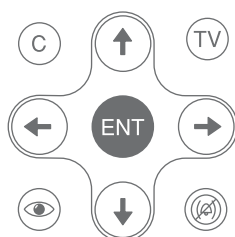Indien de TELETASK TV Interface werd geïnstalleerd (TDS ref. 14050), kunt u deze afstandsbediening gebruiken om uw domotica systeem via de TV te bedienen.



De TV toets activeert het TELETASK bedieningsmenu op uw TV. Met de vier pijltjestoetsen bladert u door de verschillende menu's. De toets ENT dient als selectie toets, terwijl de C toets de actie annuleert of u terug naar het vorige menu brengt.


Twee bijkomende functies zijn:

-  Deze toets toont u rechtstreeks het beeld van een (optionele) camera, aangesloten op de TV Interface.
-  Met deze toets bevestigt/verwijdert u alarmen of berichten van uw beeldscherm.

## DE BATTERIJ VERVANGEN

U vervangt de batterij door uw afstandsbediening om te draaien zodat de toetsen naar beneden wijzen. Klik het clipje, aangeduid op de tekening, naar rechts en schuif de batterijhouder uit de afstandsbediening.

Vervang de oude batterij met een batterij van het type CR2025 of CR2032. Let er op dat u de batterij correct in de houder legt. Het + teken wijst steeds naar de achterzijde van de afstandsbediening.

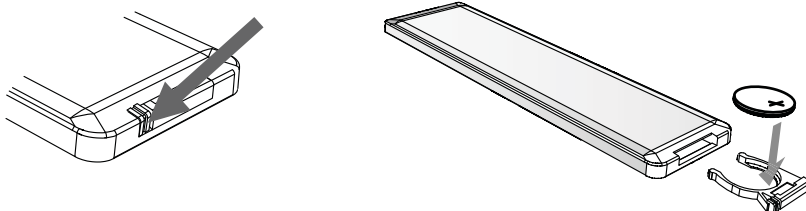

OPGELET: Batterijen kunnen schadelijk zijn voor het milieu. Recycleer ze op gepaste wijze.

## OPMERKINGEN

Een TELETASK apparaat word ontworpen om tegemoet te komen aan de hoogste eisen van comfort. Verlichting, rolluiken, toestellen, sferen, verwarming, airco, audio, radio, video en dergelijke kunnen allemaal worden bediend.

Deze afstandsbediening werkt op alle bedieningspanelen van het TELETASK gamma. Het is mogelijk dat enkele nieuwe functies (bijvoorbeeld, RGB meerkleuren sturing) niet werken op oudere bedieningspanelen.

### VEILIGHEIDSVOORSCHRIFTEN:

Sommige functies kunnen gevaarlijk zijn wanneer ze worden bediend door kleine kinderen, bezoekers of andere personen. Vermijd dat zij eenvoudig bij de afstandsbediening kunnen komen of vermijd functies die mogelijks voor gevaar kunnen zorgen (zoals het automatisch openen van deuren, activeren van een alarm, ...).